



**DRAWMER**

**CMC3**  
MONITOR CONTROLLER

TALKBACK    EXT MIC    AUX LEVEL    SPEAKER SELECT    HEADPHONE

LOCK    DIGI    I/P1    I/P2    AUX    LEFT    RIGHT    REV    MONO    DIM    MUTE

SOURCE SELECT    CUT    MASTER VOLUME    CUT    MIX CHECK

AUX INPUT    PRESET LEVEL    HEADPHONE

**HEADPHONES**

**IPOD or MP3**

**MIXING CONSOLE**

**TALKBACK MIC**

**DIGITAL AUDIO WORKSTATION**

**CD/DVD/SACD Player**

**Talkback**  
TO LIVE ROOM  
OR TO OVERLAY  
INFORMATION  
TO A TRACK

**Sub-Woofer**

**C Right C Left**

**B Right B Left**

**A Right A Left**